

SUPERPURE

14L Mineral Pot Filter
Quickstart Installation Guide



INSTALLATION

Step 1

Remove packaging and soak all 3 filters in clean water for 30 minutes. Rinse off well before continuing.



INSTALLATION

Step 2

Install tap into bottom tank. Ensure that one o-ring is placed on the inside and one o-ring is placed on the outside. Check that tap is centred to prevent leaks.



INSTALLATION

Step 3

Place bottom tank
on filter base.



INSTALLATION

Step 4

Place mineral stones filter into bottom tank.



INSTALLATION

Step 5

Install spacer ring.



INSTALLATION

Step 6

Install multi-stage filter cartridge into filter hanger.



INSTALLATION

Step 7

Place filter hanger assembly into spacer ring.



INSTALLATION

Step 8

Inspect ceramic filter for cracks or loose base. If damaged, bacteria will not be filtered out from the system and may run through the system too quickly, causing leaks.




INSTALLATION

Step 9

Install ceramic filter into top tank. Ensure that one o-ring is installed on the inside and outside of the tank before installing nut.

Very Important!

Check that the filter is centred and that there are no gaps around the o-rings as this can cause water to leak past ceramic filter.

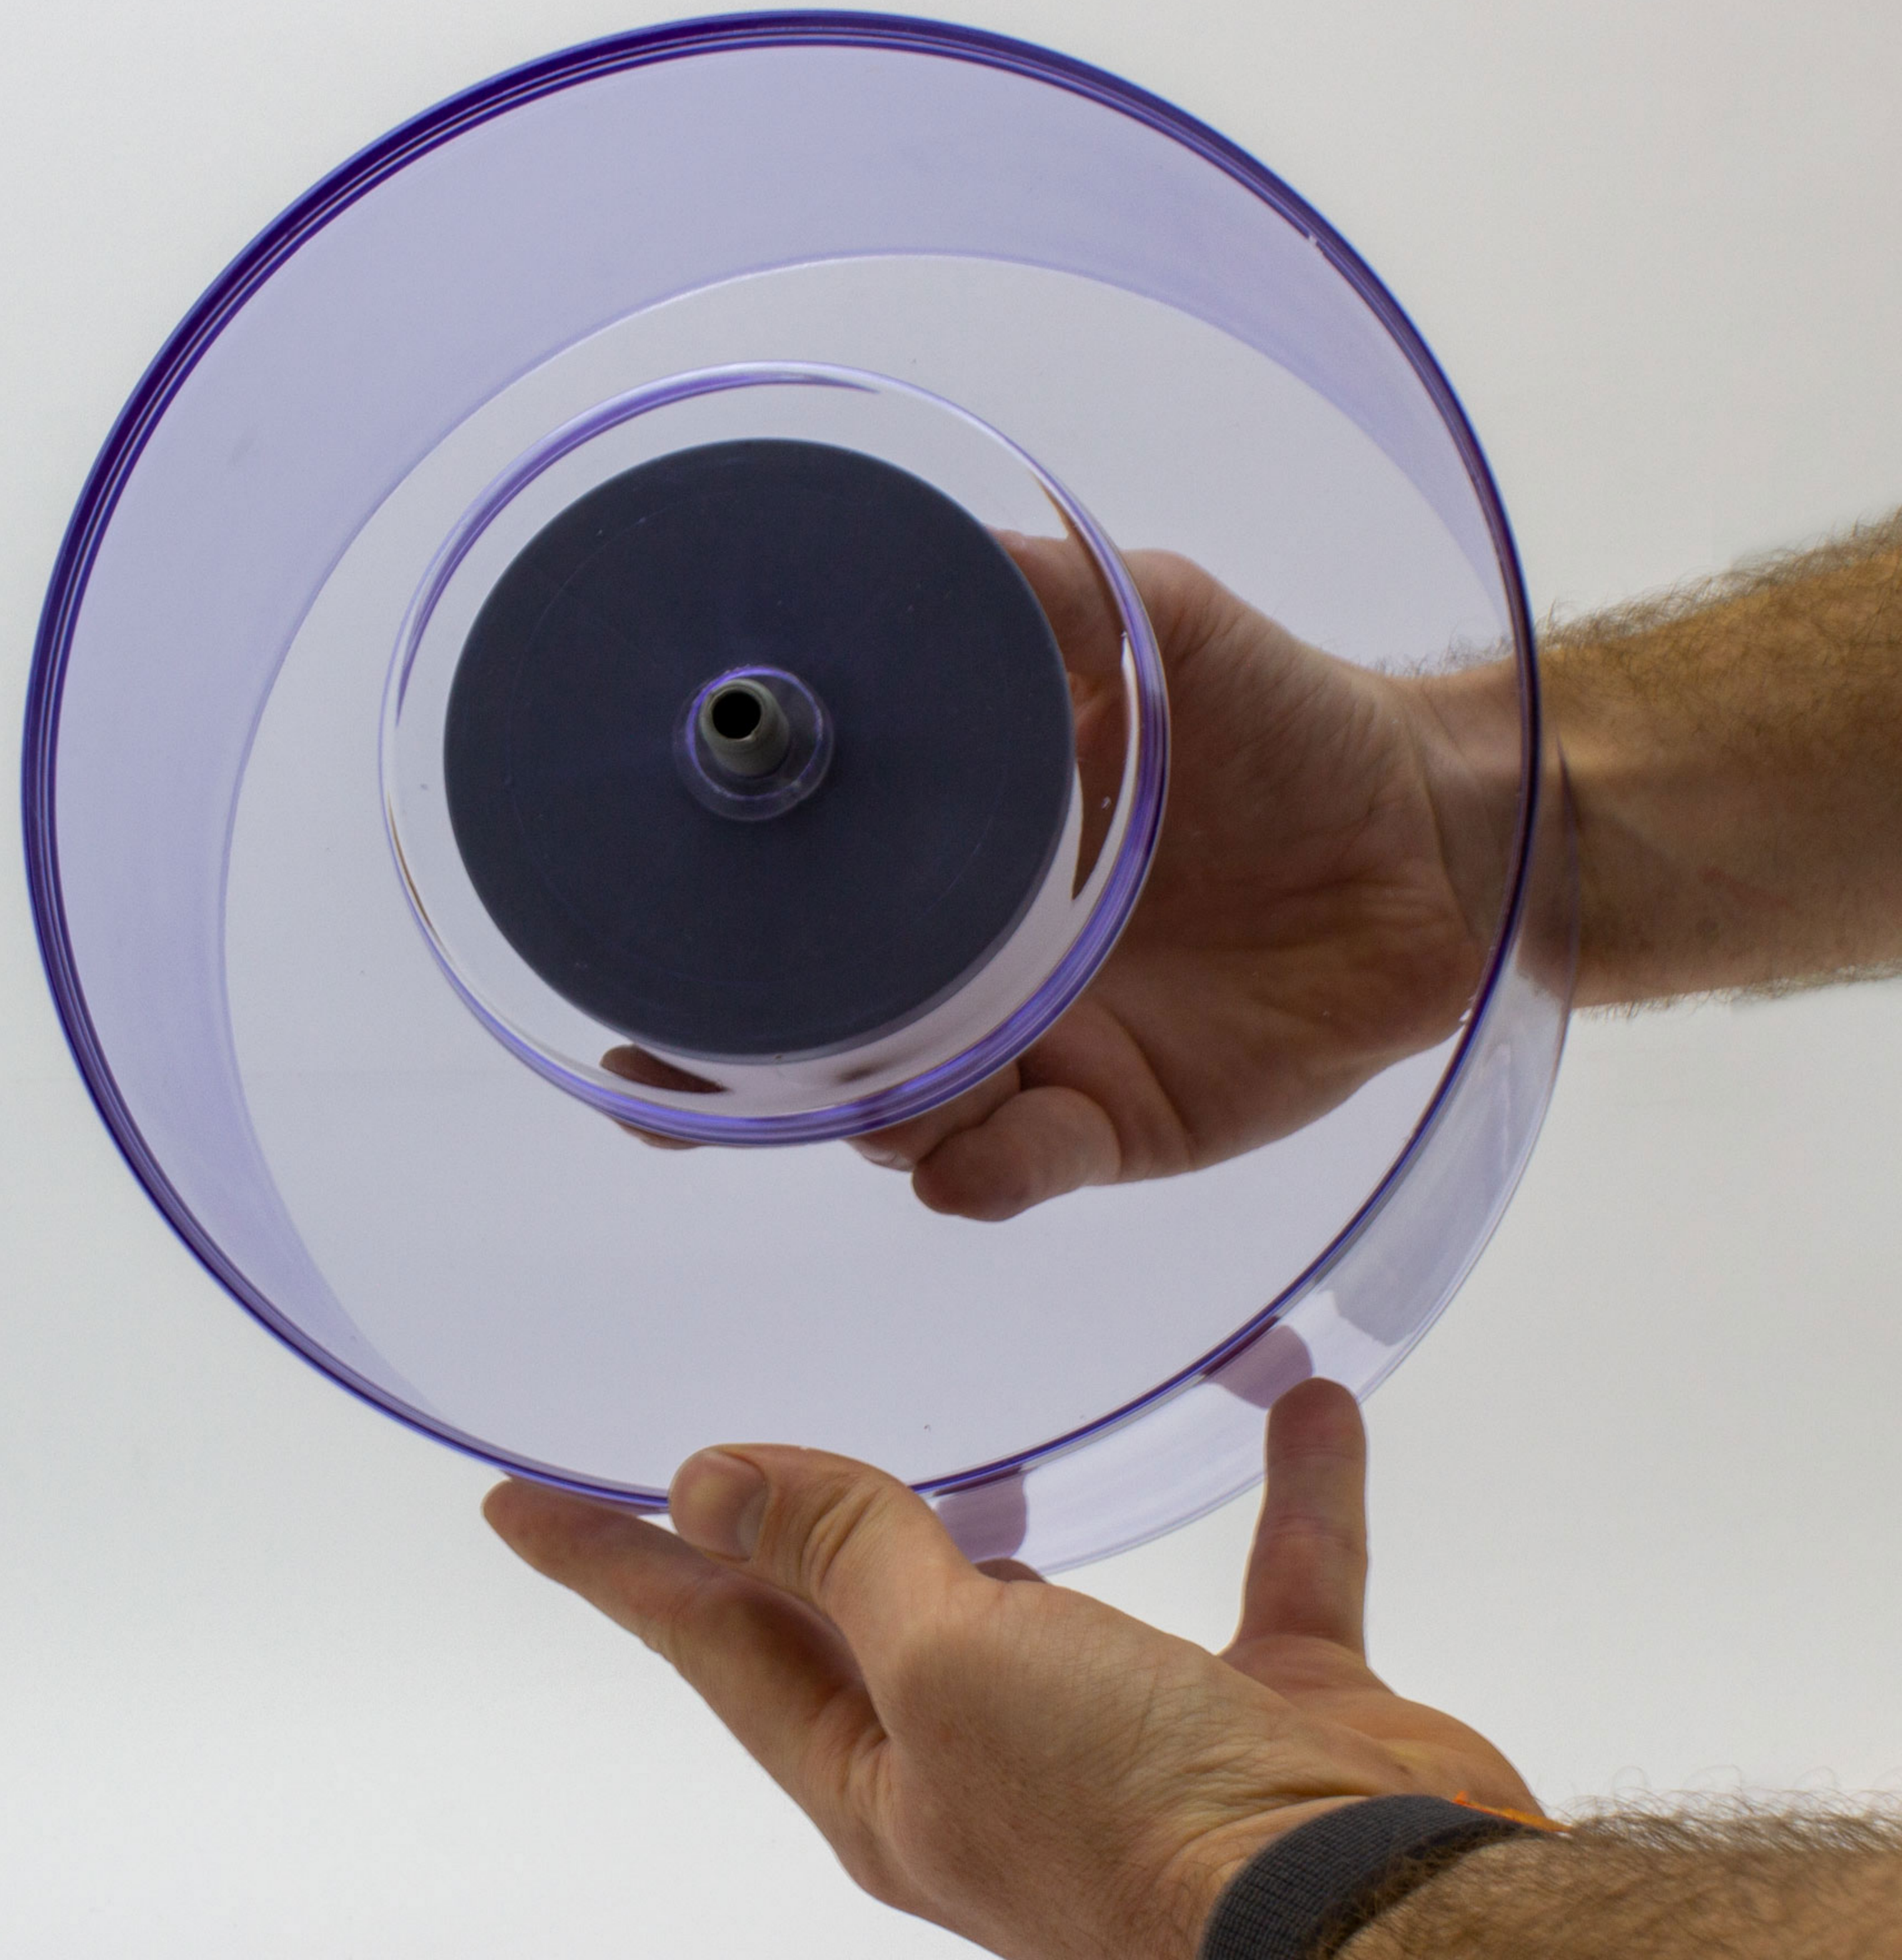


INSTALLATION

Step 9

Ceramic filter placement check.

Correctly centered filter with both o-rings installed and sealing all around.

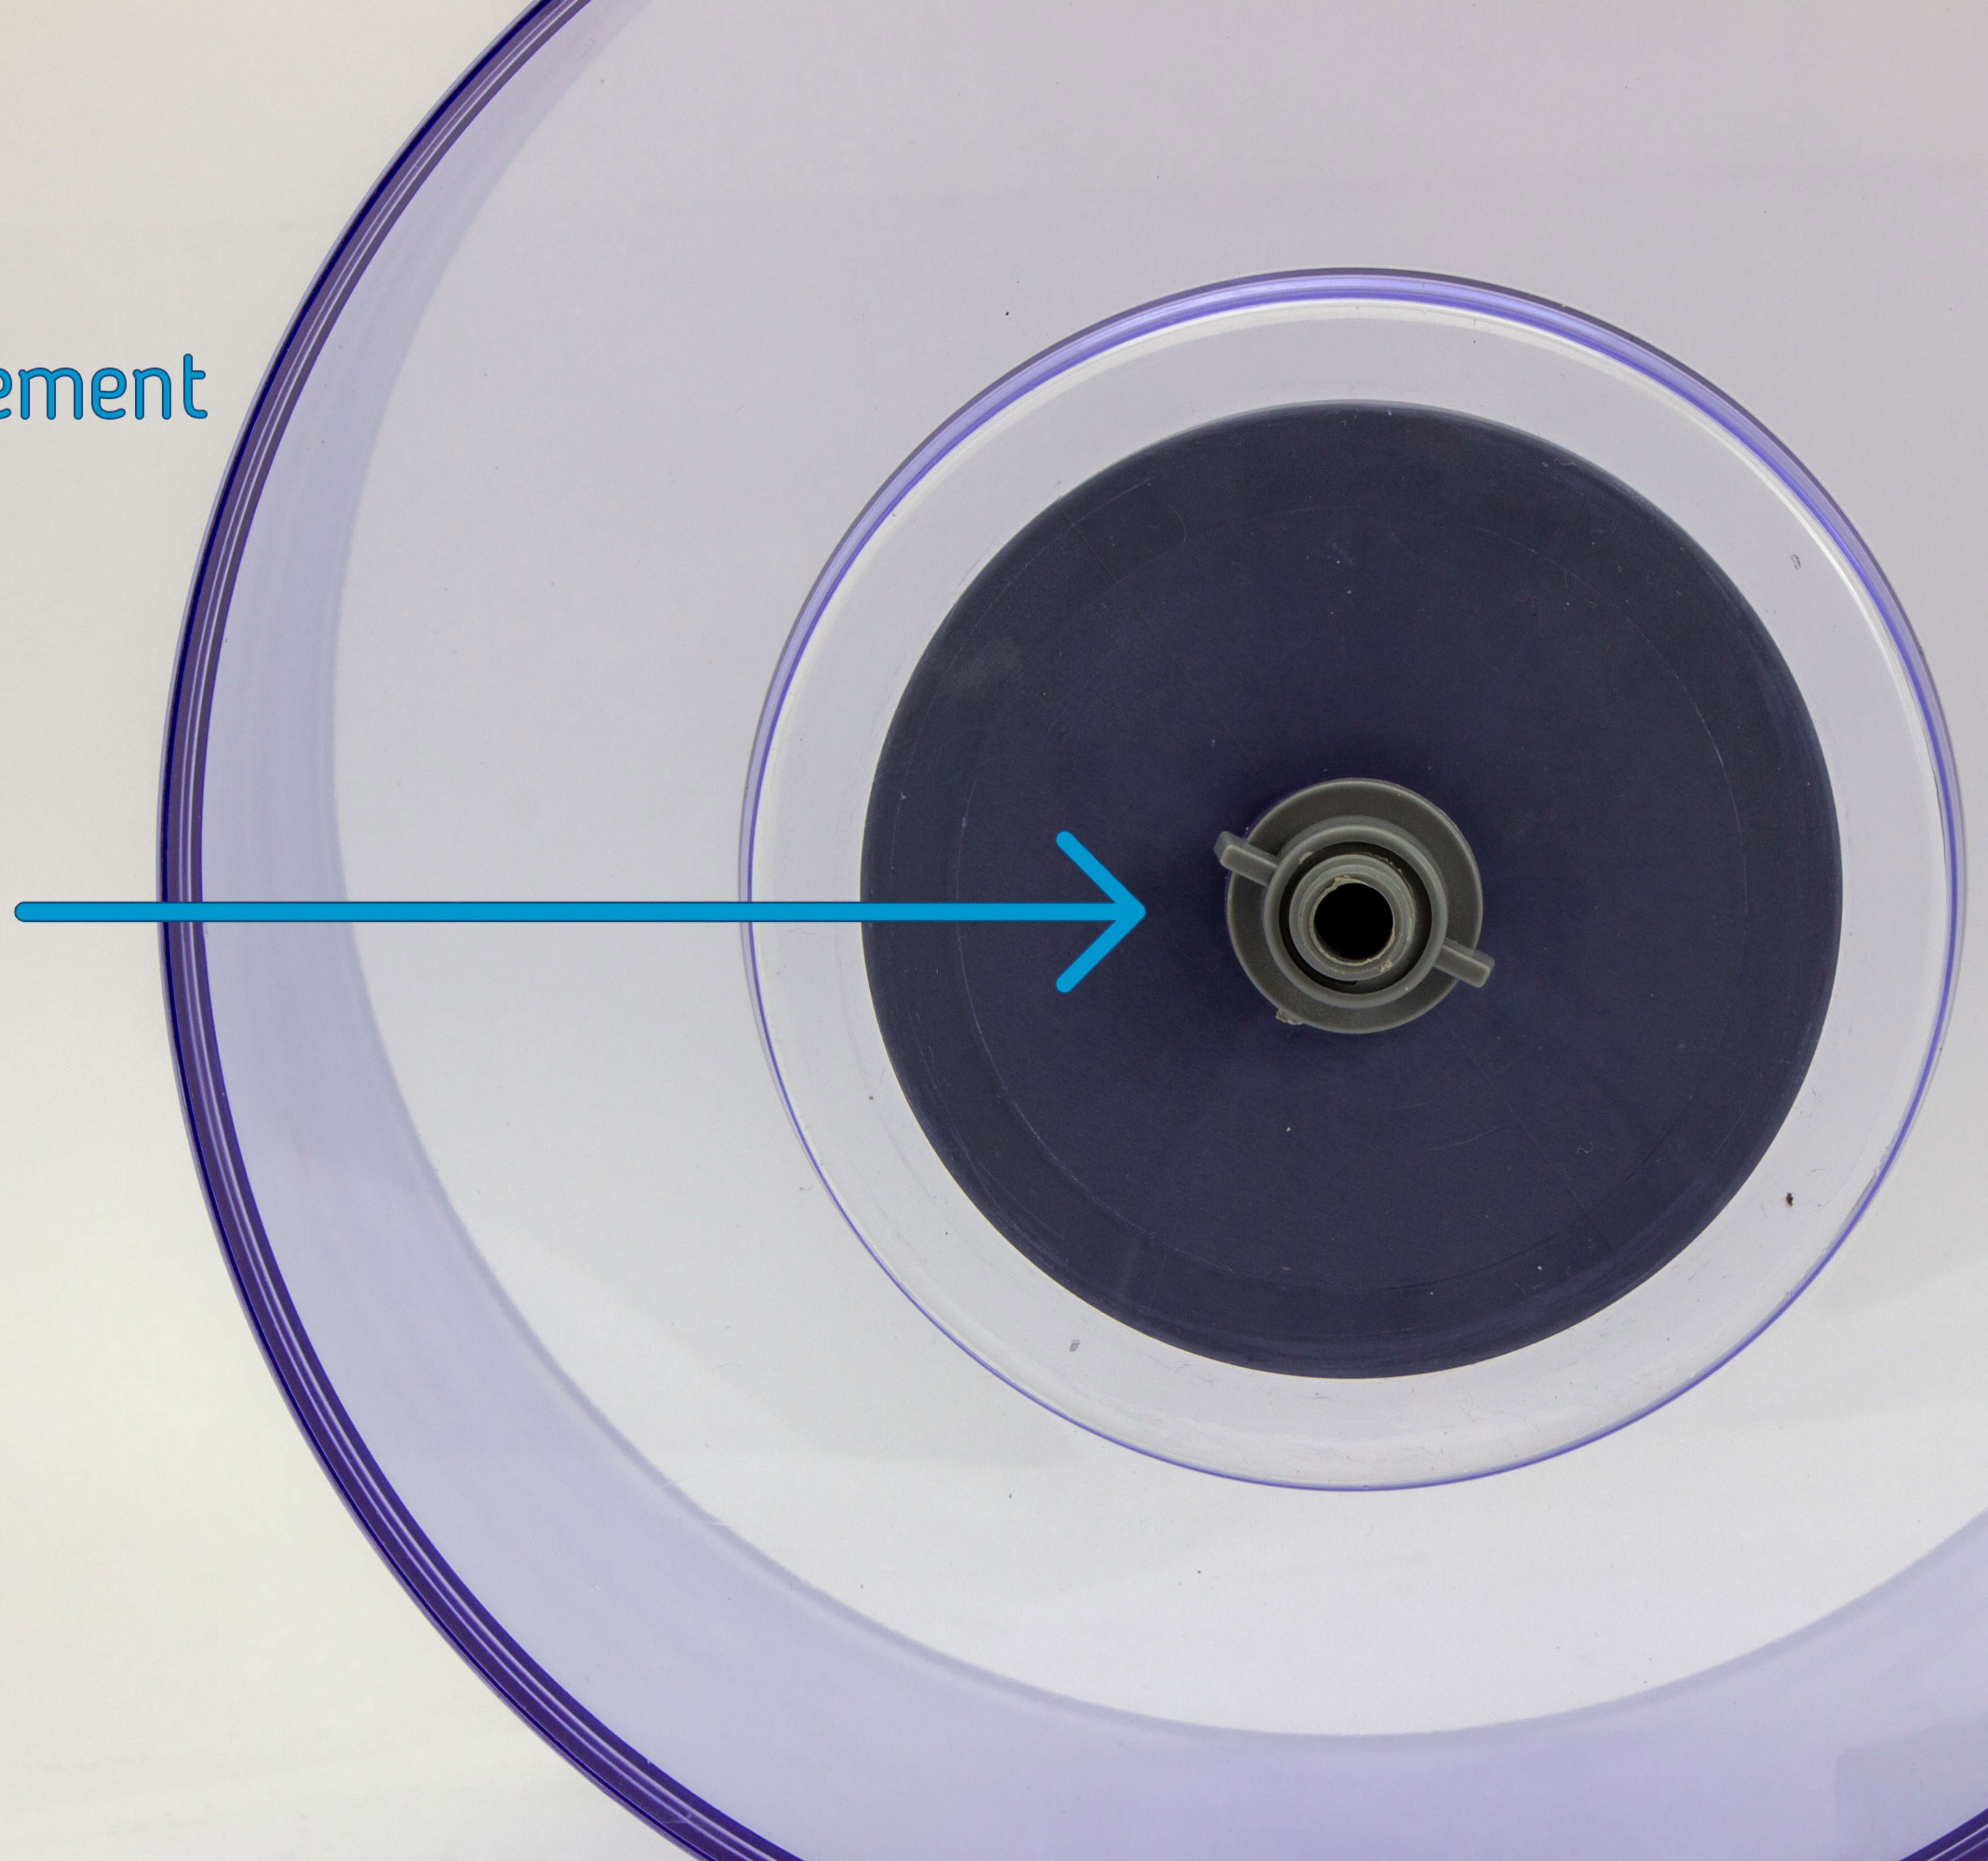


INSTALLATION

Step 9

Ceramic filter
placement check.


Not correctly
centred. Gap on
side of ceramic
filter.

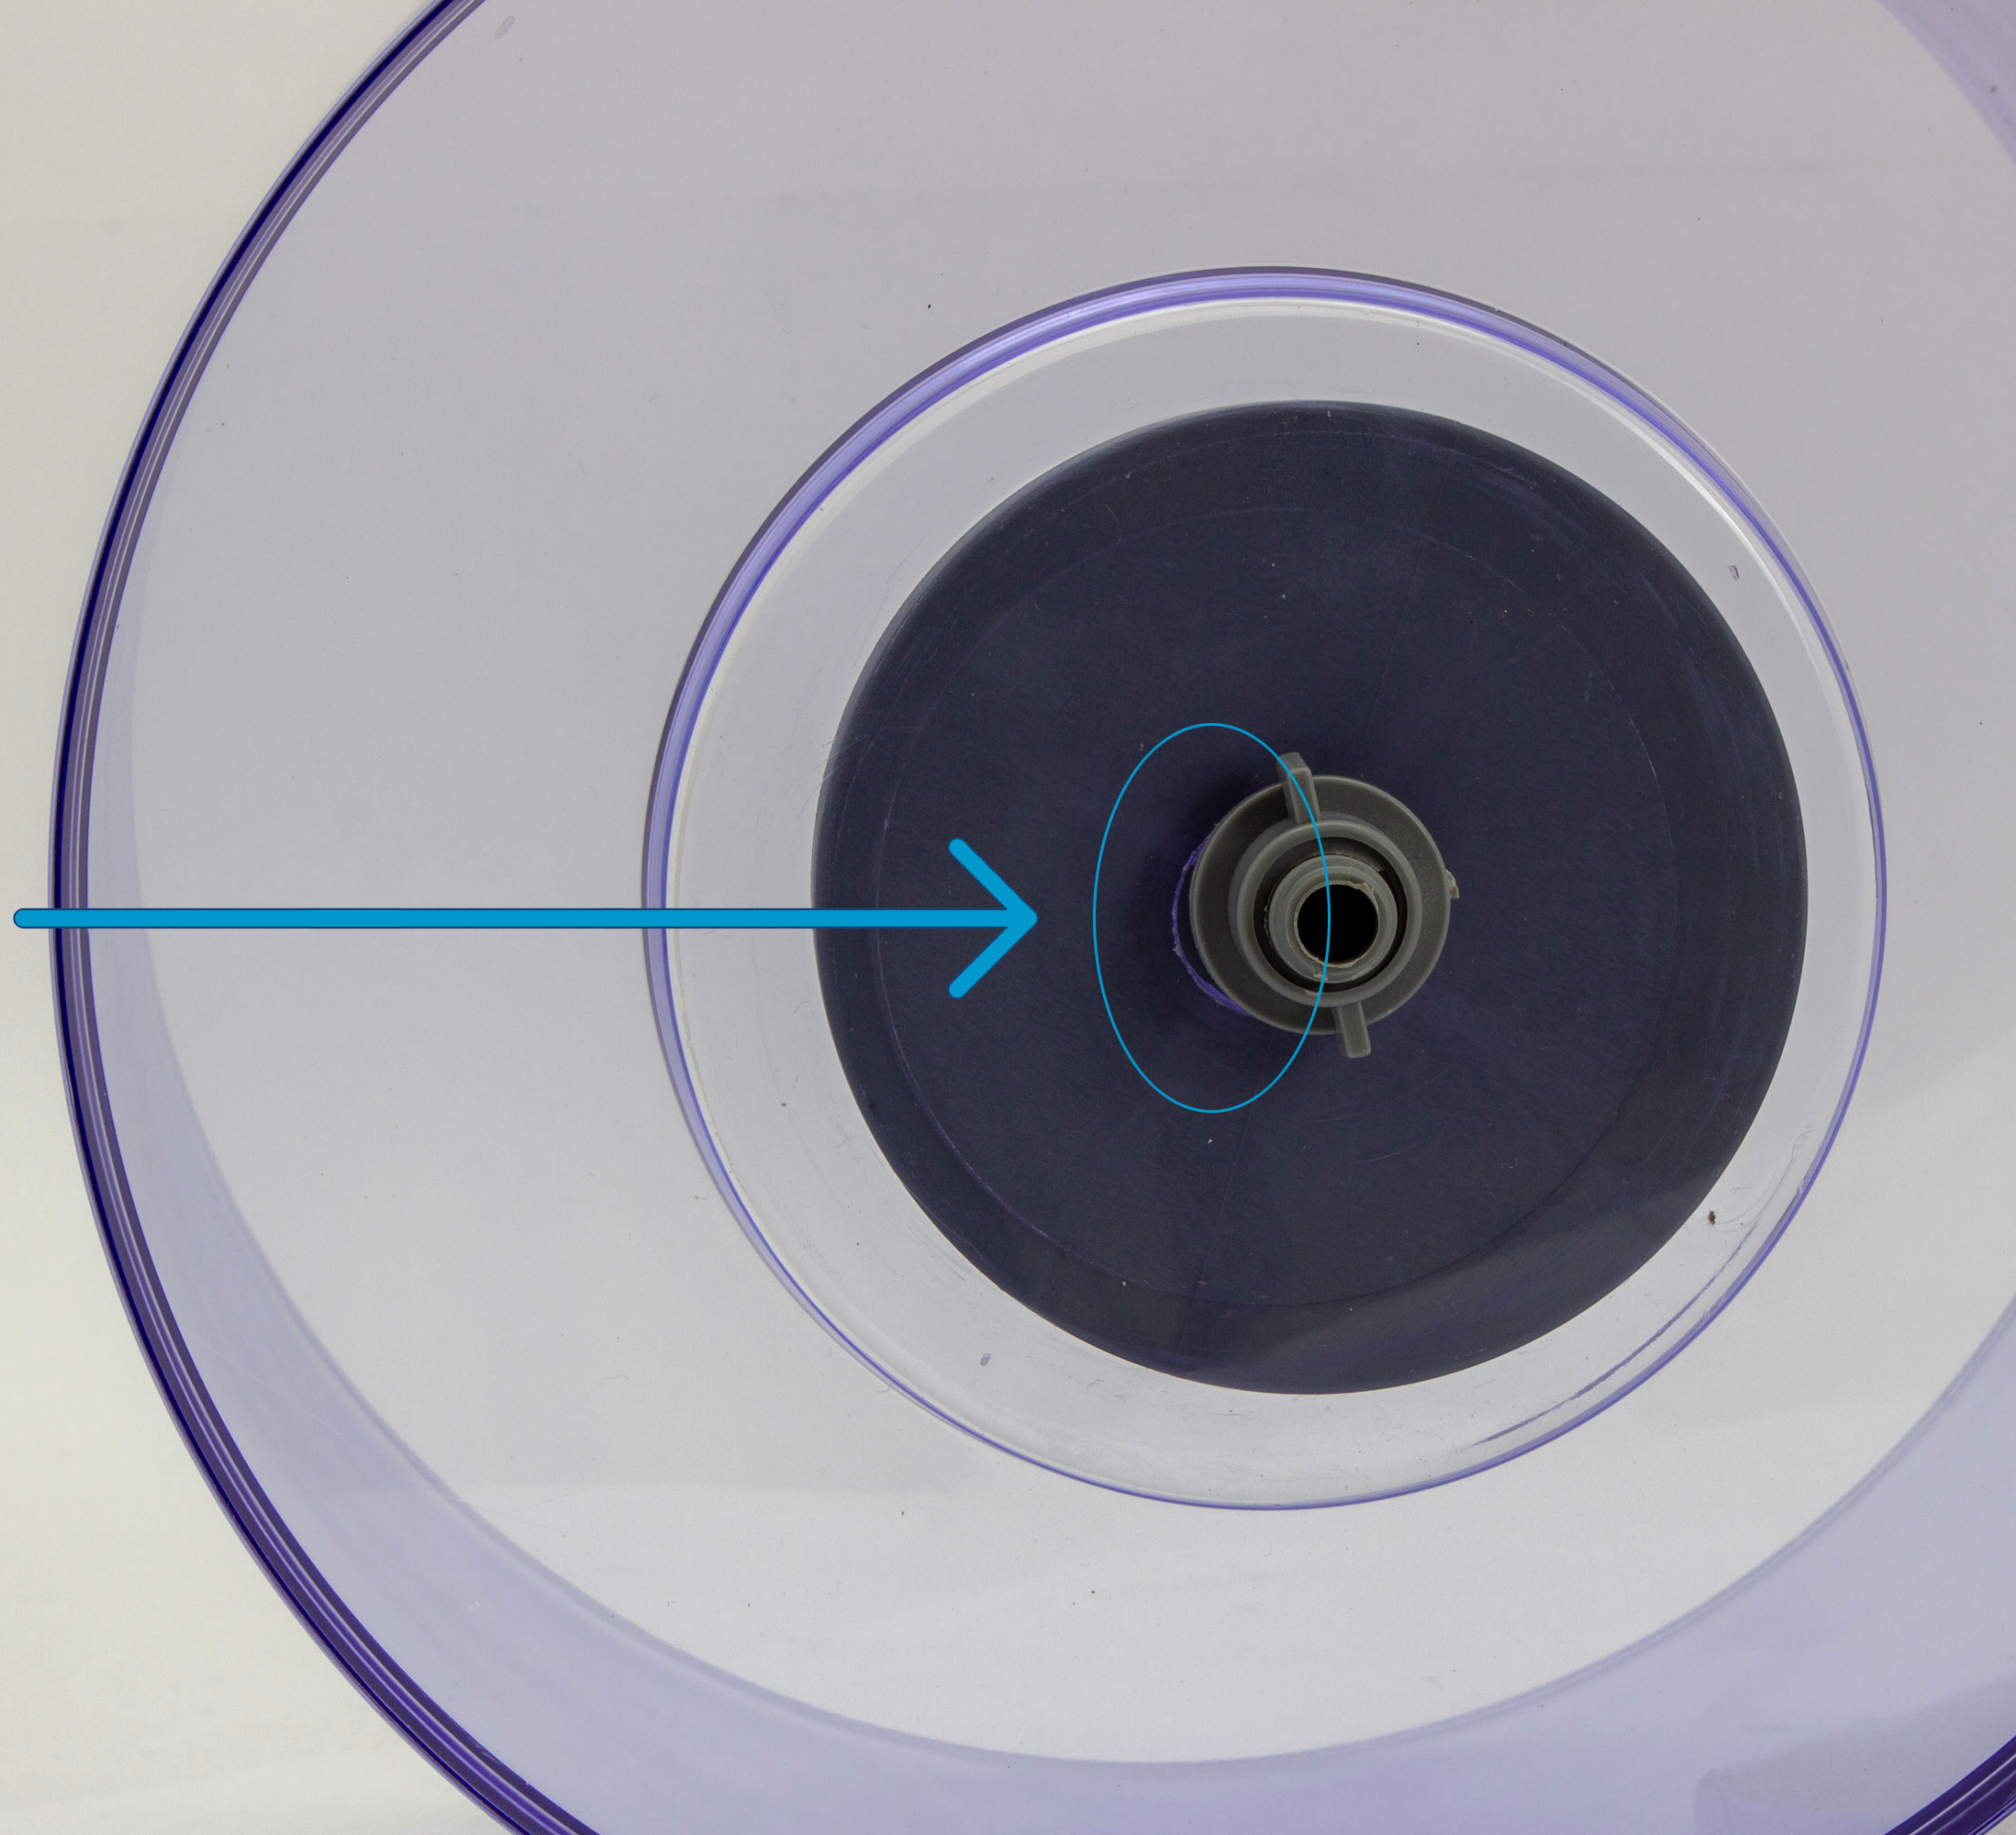

INSTALLATION

Step 10

Place top tank onto spacer ring.

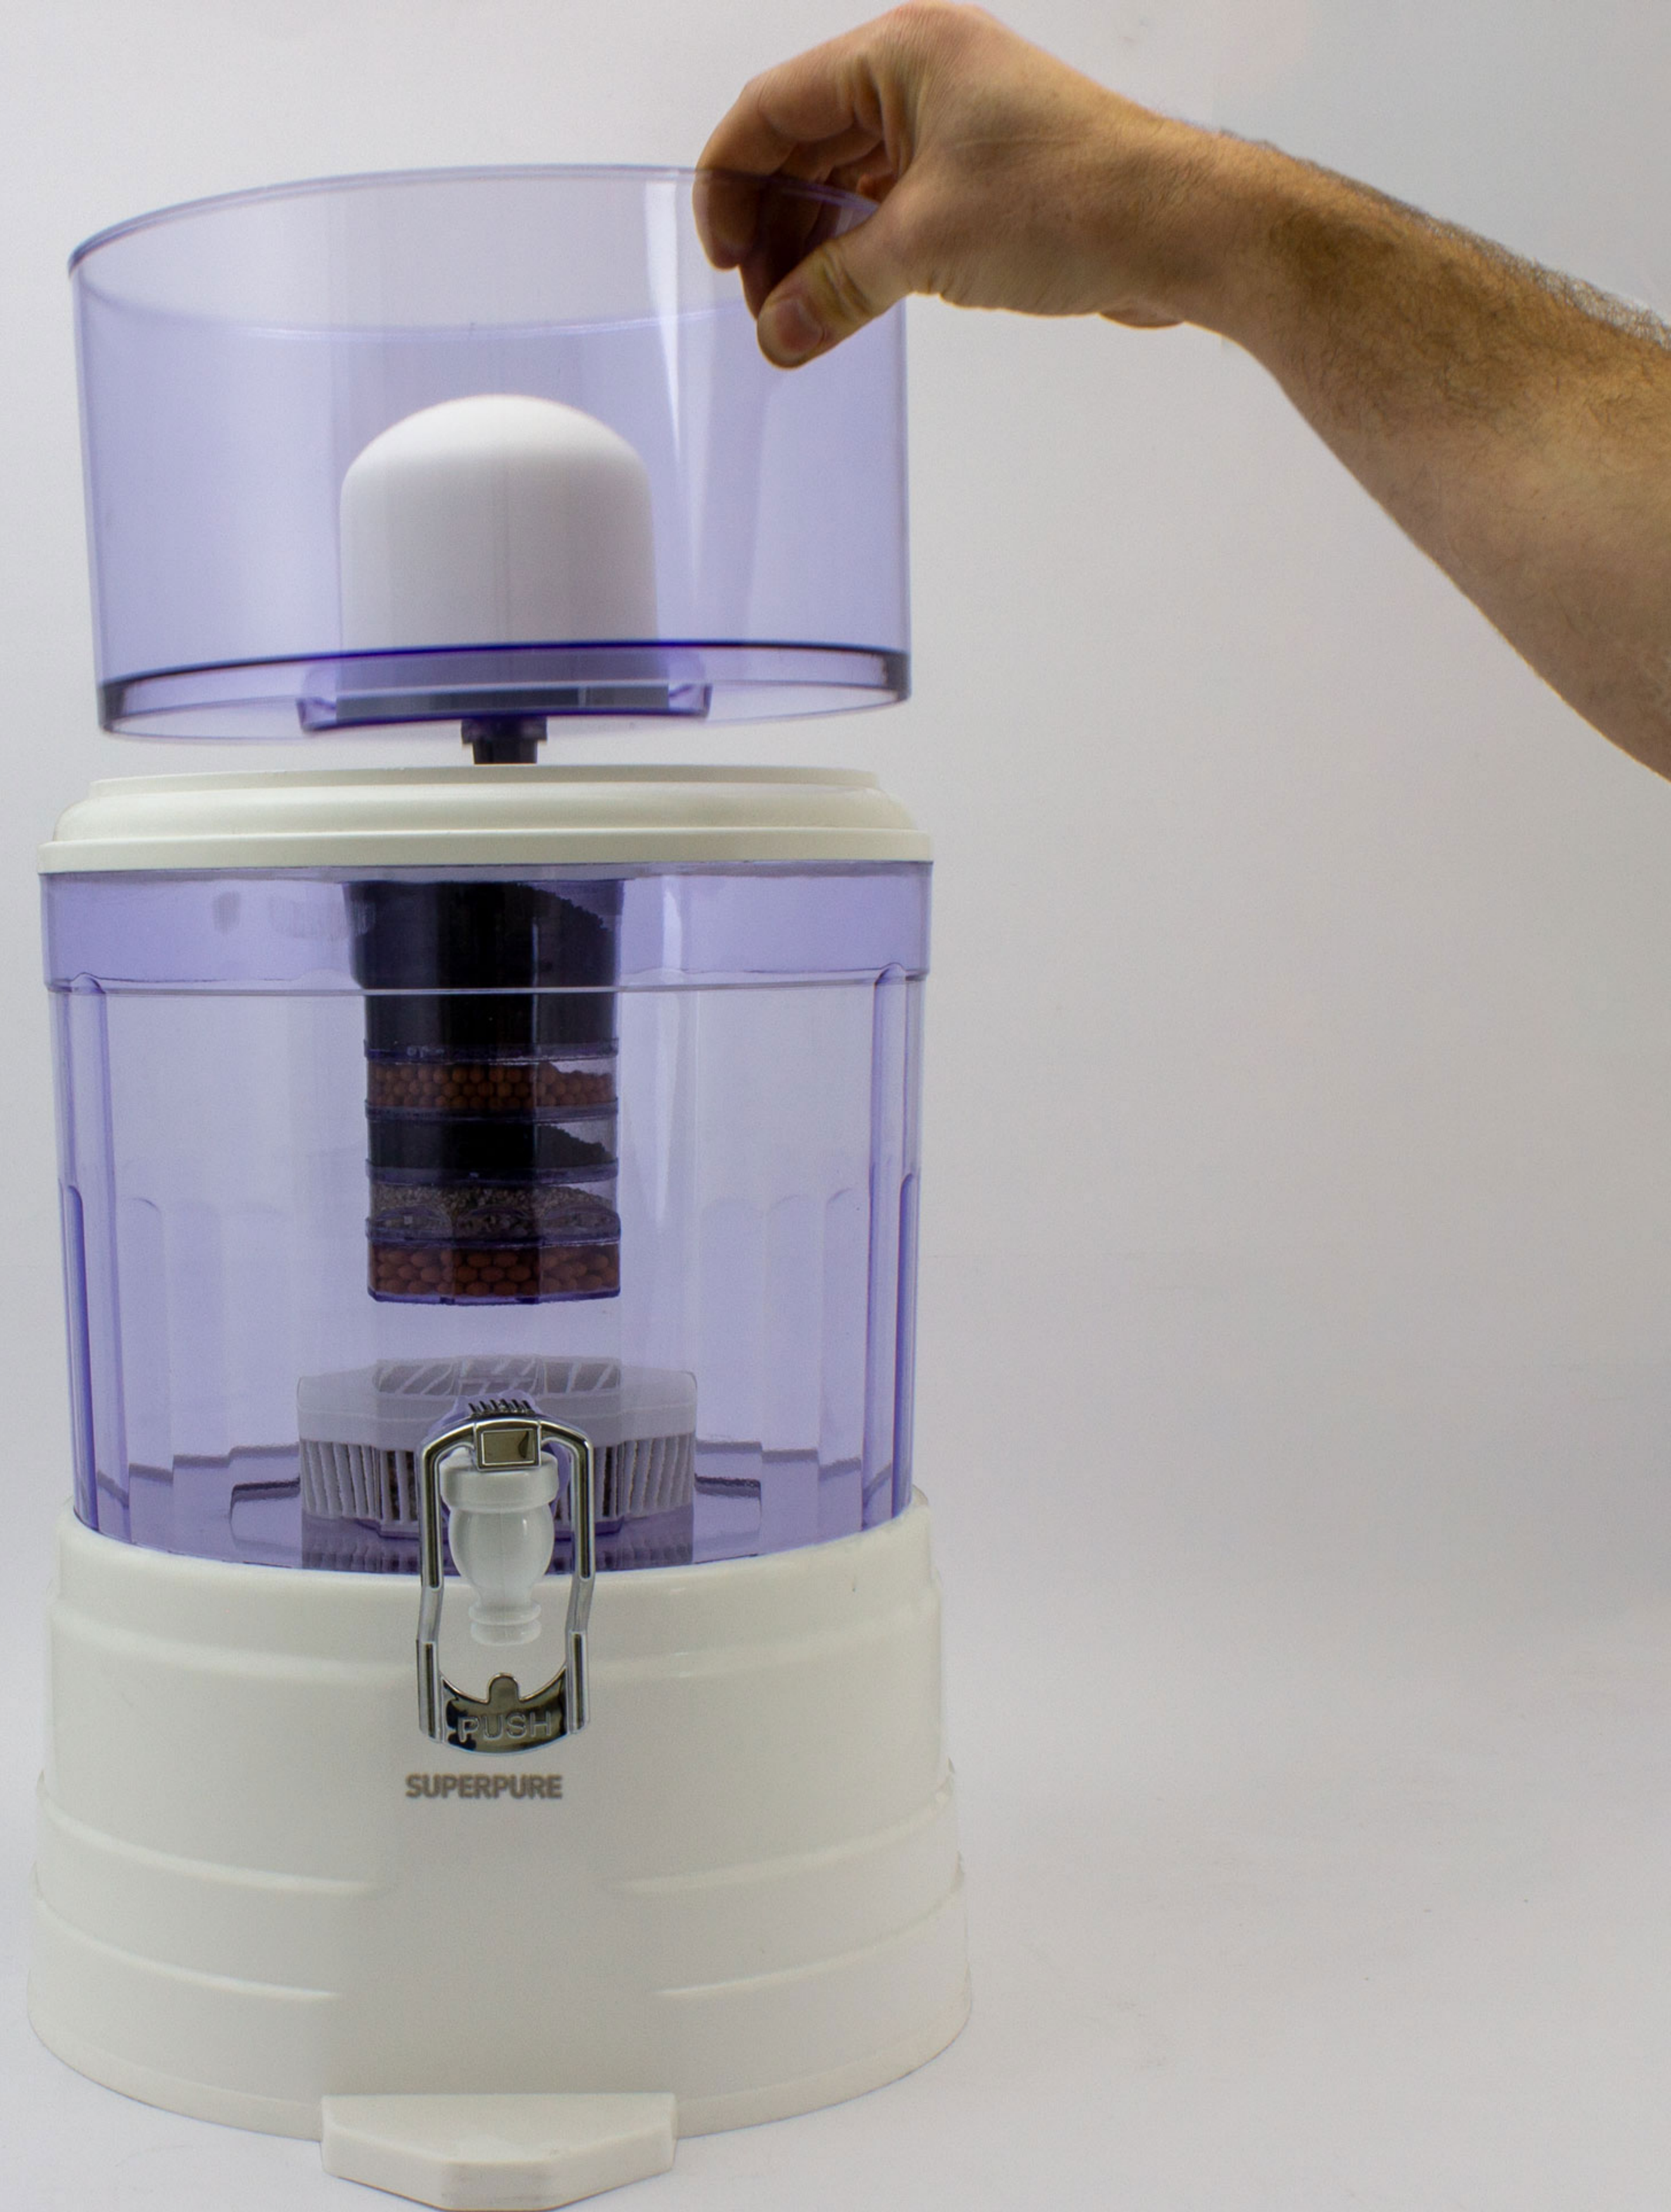

INSTALLATION

Step 11

Place lid onto top tank.
Installation is now
complete and system is
ready to use.

We recommend running
one tank of water through
system and discarding
before first use.



INSTALLATION

Troubleshooting

- Q) Water is leaking from the filter unit
- A) Unit is overfilled - Top tank filled while bottom tank more than 1/3 full
- A) Ceramic filter is not properly centred as described in Step 9
- A) Tap not centered as described in Step 2
- A) Ceramic filter cracked/damaged
- Q) Water runs through very slowly
- A) The filters have not been soaked/primed
- A) The filter is gravity-feed, so it does take a few hours to filter through - this is normal

